


PREXISO



PLC30GLI

RECHARGEABLE GREEN BEAM SELF-LEVELING CROSS LINE LASER

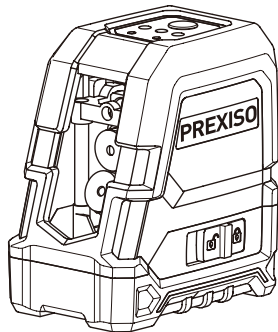

www.prexiso-eu.com

1

UNPACKING

When unpacking the box, do not discard any packing materials until all of the contents are accounted for:

- Rechargeable green beam self-leveling cross line laser tool
- Magnetic mounting base
- Type-C cable wire
- Green target plate
- Handy cloth bag
- Instruction manual

Carefully lift the compact laser measuring tool out of the package and place it on a stable, flat surface.


ASSEMBLY

Measuring Tool Power Supply
The measuring tool can be charged with the included Type-C cable wire.

Charge the measuring tool

- Use the included Type-C cable wire to charge the measuring tool.
- When the measuring tool is being charged with Type-C cable wire, the LED light(D) turns red.
- When the measuring tool is fully charged, the LED light(D) turns green.
- When the Type-C cable wire is unplugged from the measuring tool, the LED light(D) goes out.

Note: The measuring tool is supplied partially charged.
To ensure full power capacity, fully charge the measuring tool before using your tool for the first time. The tool can be charged at any time without reducing its service life.

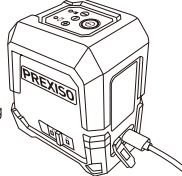

OPERATION

Automatic Operating Mode

When the measuring tool is under switch-off status, slide the switch(F) to the direction of the **⏻** side, the measuring tool is switched on and a cross line laser is generated. The measuring tool has three available operating modes (B) which you can switch between at any time by short pressing the **⏻** button.

Slide the switch(F) to the direction of the **🔒** side, the measuring tool is switched off.

5

IMPORTANT SAFETY INSTRUCTIONS

Working safely with the measuring tool is possible only when the operating and safety information are read completely and instructions contained herein are strictly followed. Never make warning labels on the measuring tool unrecognizable. SAVE THESE INSTRUCTIONS.

Caution – The use of operating or adjusting equipment or the application or processing methods other than those mentioned herein, can lead to hazardous radiation exposure.



Laser radiation-Do not stare into beam.
λ=510-530nm
Class II Laser product. Conforms with 21 CFR 1040.10 and 1040.31 except for conformance with IEC 60825-1 Ed. 3, as described in Laser Notice No. 50, dated May 9, 2019



WARNING

LASER RADIATION. Do not stare into beam. Class II laser product. Turn the laser beam on only when using this tool.

- Do not remove or deface any product labels.
- Avoid direct eye exposure. The laser beam can cause persons being blinded.
- Do not operate the tool around children or allow children to operate the tool.
- Do not place the tool in a position that may cause anyone to stare at the laser beam, whether intentionally or unintentionally.
- Do not use on reflecting surfaces such as sheet steel, glass or polished metal etc, that have shiny, reflective surfaces. The shiny surface could reflect the beam back at the operator.
- Always turn the laser tool off when not in use. Leaving the tool on increases the risk of someone inadvertently staring into the laser beam
- Do not attempt to modify the performance of this laser device in any way. This may result in a dangerous exposure to laser radiation.
- Do not attempt to repair or disassemble the laser-measuring tool. If unqualified persons attempt to repair this product, serious injury may occur. Any repair required on this laser product should be performed only by qualified service personnel.
- Use of other accessories that have been designed for use with other laser tools could result in serious injury.

2

Manual Operating Mode

When the measuring tool is under switch-off status, press the **⏻** button for 3 seconds, the measuring tool is switched on and the pendulum/transport is locked.

3 available operating modes(B) can be switched between at any time by short pressing the **⏻** button. Under such circumstances, the pendulum/transport lock LED is solid red, the measuring tool can not be leveled automatically. Slide the switch to the direction of the **⏻** side, the pendulum/transport lock LED turned green, the measuring tool can be leveled automatically. The measuring tool can be switched off by sliding the switch(F) to the direction of the **🔒** side and by pressing the **⏻** button for 3 seconds when the switch(F) is on the direction of the **🔒** side.

Using with the Clamp, Magnetic Mounting Base or Tripod

At the bottom of the tool, a 1/4"-20 nut(G) is located. Mount the tool to accessories like clamp(not included), magnetic mounting base(included) or tripod (not included) by assembling the tool nut with the 1/4"-20 screws on the accessories. With the accessories, the tool can work under various applications which makes jobs done easier.

Note: Make sure the tool can be assembled on the accessories without damage or interference to any part of the measuring tool or the accessories.

APPLICATIONS

The compact self-leveling cross line laser can be placed on the ground, mounted on a work bench / door frame etc, for point marking and simple alignment by sight. It is ideal for the following applications:

- Hanging pictures, photos, or artwork on walls
- Wallpapering and stencil work
- Framing doors and windows
- Installing electrical wiring and pipes
- Mounting wall fixtures, electrical outlets, switches and lighting
- Installing a drop ceiling
- Painting
- Installing cabinets
- Laying tile and flooring

6

- Do not operate the tool outdoors.
- Do not place or store tool under extreme temperature conditions.
- Do not operate the tool in explosive environments, such as in the presence of flammable liquids, gases or dusts. Sparks can be created in the tool which may ignite the dust or fumes.
- Keep the tool away from cardiac pacemakers. The magnet inside the tool generates a field that can impair the function of cardiac pacemakers.
- Keep the tool away from magnetic data medium and magnetically-sensitive equipment. The effect of the magnetic can lead to irreversible data loss.
- Measurement may not be accurate if used beyond the rated range of the device.
- The use of optical instruments with this product will increase eye hazard.
- Always make sure any bystanders nearby aware of the dangers of looking directly into the measuring tool.
- Do not use the laser viewing glasses as safety goggles, they do not protect eyes against laser radiation.
- Always remove the batteries when cleaning the laser light aperture to laser lens.

TECHNICAL SPECIFICATIONS

COMPONENT	SPECIFICATIONS
Laser	λ=510-530nm, Class 2 laser, maximum laser output<1mW
Operating range (typically)	100FT/30M(under 300LUX indoor environment)*
Accuracy (typically)	±3/16" @30FT (±5mm@10m)*
Self-leveling range	±4°
Estimated battery life	>7h (Lithium-ion battery)
Optimum operating temperature	32°F to 104°F (0°C to 40°C)
Storage temperature	14°F to 140°F (-10°C to 60°C)
Batteries	3.7V rechargeable Lithium-ion battery
Battery capacity	2600mAh
Dimensions	3.94x3.6x2.44in (100x91.5x62mm) ±5%
Weight	0.75lb(0.34kg)±5%

*Important: The accuracy is rated within distance of 10 meters. Under unfavorable conditions, such as in extreme interior illumination, transparent surfaces (eg. glass, water), porous surfaces (eg. insulation materials) or reflecting surfaces (eg. polished metal, glass) or very rough surfaces (eg. rough cast, natural stone), the tool's measuring range and accuracy will be reduced.

3

MAINTENANCE

This compact laser measuring tool has been designed to be a low-maintenance tool. However, in order to maintain its performance, you must always follow these simple directions:

- Avoid exposing the tool to shock, continuous vibration or extreme hot or cold environment.
- Always store the tool indoors.
- Always keep the tool free of dust and liquids. Use only a clean soft cloth for cleaning. If necessary, slightly moisten the cloths with pure alcohol or a little water.
- Do not disassemble the compact laser measuring tool, this will expose the user to hazardous radiation exposure.
- Do not attempt to change any part of the laser lens.

TROUBLE SHOOTING

PROBLEM	CAUSE	SOLUTION
LED light (D) blinks	Short of power.	Charge the tool.
The laser line is hard to see.	The tool is out of the rated operating range.	Move the tool closer to be within the rated operating range.
Laser line is not projected.	No power.	Charge the tool.
The lasers blink and the LED light (E) on the top goes red on automatic leveling mode.	The surface where the tool has been placed is uneven or the tool is out of its automatic self-leveling range.	Place the tool on flat surface levels within ±4 degrees.

DISPOSAL

CAUTION


The batteries must not be disposed with household waste. Care for the environment and take them to the collection points provided in accordance with national or local regulations. Dispose of the product appropriately in accordance with the national regulations in force in your country. Adhere to the national and country specific regulations.



7

DESCRIPTION

RECHARGEABLE GREEN BEAM SELF-LEVELING CROSS LINE LASER
This self-leveling cross line laser is a highly versatile tool. It can be placed on the ground, mounted on a door frame or work bench etc. when use the appropriate accessories eg. magnetic mounting base(included), tripod(not included) etc, but not limited.
• Self-leveling levels within ±4 degrees to -4 degrees with an accuracy of ±3/16" @30FT (±5mm@10m)*.
• Rechargeable Lithium-ion battery

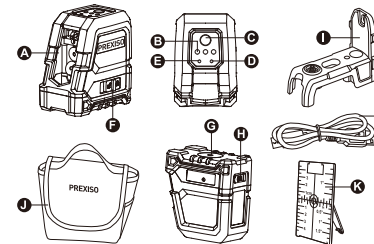

PARTS	DESCRIPTION
A	Laser beam outlet aperture
B	Available 3 line modes (Cross, horizontal and vertical line modes)
C	Power ON / OFF / mode switch key
D	LED for state of charge and rechargeable battery
E	Pendulum / transport lock LED
F	Power ON / OFF and transport lock / release key
G	1/4 - 20 Threaded mount
H	Charging port
I	Magnetic mounting base
J	Handy cloth bag
K	Green target plate
L	Type-C cable wire

4

WARRANTY

Two-Year Limited Warranty. This product is warranted to the original purchaser from the original purchase date for two years subject to the warranty coverage described herein. Please retain your receipt. This product is warranted to the original user to be free from defects in material and workmanship. If you believe that the product is defective at any time during the specified warranty period, please contact Prexiso customer service agent by sending email to info@prexiso-eu.com. This warranty does not cover: (1) Part failure due to normal wear or product abuse, (2) Any parts have been altered or modified by anyone other than an authorized Prexiso personnel or failure to install and operate equipment according to the guidelines put forth in the instruction manual. (3) Any products or parts used for rental purposes, damage resulting from shipping (claims must be filed with freighter), accident, abuse, act of God, misuse, or neglect. Prexiso will replace or repair the defective unit, at its option, subject to verification of the defect. Any implied warranties arising from the sale of a Prexiso product, including but not limited to implied warranties of merchantability and fitness for a particular purpose, are limited to the above. Prexiso shall not be liable for loss of use of the product or other incidental or consequential damages, expenses, or economic loss, or for any claim of such damage, expenses, or economic loss. This warranty excludes any accessories. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

Printed in China

8